

A12	Engine control unit
A19	Junction block (driver side)
A21	Center junction block
A28	Combination meter
A54	Immobilizer transponder
A79	(Content is being translated)
A373	Throttle control actuator assembly
C1	Battery
EP1	Earth point 1
EP4	Earth point 4
EP5	Earth point 5
EP6	Earth point 6
EP7	Earth point 7
EP8	Earth point 8
F44 30A	AM2 30A
F49 20A	EFI 20A
F50 15A	ETCS 15A
F51 10A	GAUGE 10A
F53 10A	IGN 10A
F54 7,5A	OBD 7.5A
F79 120A	ALT 120A
F102 40A	AM1 40A
H32	"CHECK ENGINE" warning light
H35	Cruise control indicator light
K18	Fuel pump relay
K37	Engine control relay
M34	Fuel pump
S21-1	Knock sensor 1
S21-2	Knock sensor 2
S41	Throttle position sensor
S43	Crankshaft position sensor
S44	Accelerator pedal position sensor
S45	Camshaft position sensor
S70	Coolant temperature sensor
S90	Power steering pressure switch
S91-B1S2	Oxygen sensor (B1S2)
S92-B1S1	Air fuel ratio sensor (B1S1)
S119	Stop lamp switch
S121	Ignition switch
S157	Cruise control switch

S157-3	RESUME/ACCEL switch
S157-4	SET/COAST switch
S157-5	CANCEL switch
S202	(Content is being translated)
S260	Mass air flow sensor assembly
S281	EVAP pressure sensor
X1	Diagnostic connector
X8	Diagnostic connector DLC3
X101	J/C 1
X102	J/C 2
X104	J/C 4
X106	J/C 6
X107	J/C 7
X108	J/C 8
X109	J/C 9
Y18	EVAP purge valve
Y18-4	Fuel vapor pressure sensor solenoid valve
Y22-1	Injector 1
Y22-2	Injector 2
Y22-3	Injector 3
Y22-4	Injector 4
Y22-5	Injector 5
Y22-6	Injector 6
Y117	Canister close solenoid valve

B	Black
B-L	Black-Blue
B-R	Black-Red
Br	Brown
Br-Y	Brown-Yellow
B-W	Black-White
B-Y	Black-Yellow
G	Green
G-B	Green-Black
G-O	Green-Orange
G-R	Green-Red
GR	Grey
GR-B	Grey-Black
GR-R	Grey-Red
G-W	Green-White
G-Y	Green-Yellow
L	Blue
L-B	Blue-Black
L-O	Blue-Orange

Make: TOYOTA 4RUNNER

System: Engine management system

Configuration: STD

Model: 4RUNNER VZN180

Item: 5VZ-FE 183/4800

Production date: -08.2002

© Legion-Autodata

11.11.2014

page 2

L-R	Blue-Red
L-Y	Blue-Yellow
P	Pink
P-B	Pink-Black
R	Red
R-B	Red-Black
R-W	Red-White
R-Y	Red-Yellow
V	Purple
V-W	Purple-White
W	White
W-B	White-Black
W-G	White-Green
W-L	White-Blue
W-R	White-Red
Y	Yellow
Y-G	Yellow-Green
Y-R	Yellow-Red

*1	With alarm system
*2	From vehicle stability control module
*3	From SRS
*4	From igniter
*5	From vehicle stability control module, from SRS
*6	Stop lamps
*7	To ADD actuator
*8	From AC amplifier
*9	From neutral start switch
*10	From stop-lamp switch
*11	From combination meter
*12	To alarm system indicator light
*13	To key warning switch
*14	From transmission range switch
*15	From 4WD control module
*16	2WD
*17	4WD
*18	08.2000-
*19	-08.2000
*20	TCM and AT indicator lights





