

#	Name and location
A6	SRS control unit
A10	Shift lock control unit
A12	Engine control unit
A19	Junction block (driver side)
A21	Center junction block
A22	Multiplex control module
A34	Vehicle stability system actuator
A35	Vehicle stability system control unit
A52	Audio unit amplifier
A53	A/C amplifier
A54	Immobilizer transponder
A68	4WD control unit
A79	(Content is being translated)
A86	Fuse box
A111-R	Tailgate function control unit
A146	Vehicle stability system relay block
K2	Sun roof control relay
K18	Fuel pump relay
K23-1	Rear blower motor relay
K35	Daytime running lamps relay
K35-4	(Content is being translated)
K64	A/C compressor clutch relay
K135	(Content is being translated)
K147	Antenna motor relay
S3	Multi-axis acceleration sensor
S24	Deceleration sensor
S261-1	Impact sensor, front left
S261-2	Impact sensor, front right
X1	Diagnostic connector
X8	Diagnostic connector DLC3

