

A19	Junction block (driver side)
A21	Center junction block
A22	Multiplex control module
A79	(Content is being translated)
A86	Fuse box
A146	Vehicle stability system relay block
F0	Spare Fuse
F100 15A	HORN & HAZARD 15A
F13E 50A	J/B 50A
F23 10A	RR HTR 10A
F39 10A	HEAD RH 10A
F39-1 10A	HEAD RH HI 10A
F39-2 10A	HEAD RH LO 10A
F40 10A	HEAD LH 10A
F40-1 10A	HEAD LH HI 10A
F40-2 10A	HEAD LH LO 10A
F42 15A	ACC 15A
F43 7,5A	ALT-S 7.5A
F44 30A	AM2 30A
F46 15A	DEF 15A
F48 10A	ECU-IG 10A
F49 20A	EFI 20A
F50 15A	ETCS 15A
F51 10A	GAUGE 10A
F53 10A	IGN 10A
F54 7,5A	OBD 7.5A
F57 7,5A	STARTER 7.5A
F58 10A	STOP 10A
F59 10A	TAIL 10A
F69 25A	WIP 25A
F74 7,5A	ECU-B 7.5A
F75 15A	MPX-B 15A
F79 120A	ALT 120A
F81 15A	DOME 15A
F89 10A	A/C 10A
F90 50A	HEATER 50A
F100 10A	MIR HTR 10A
F102 40A	AM1 40A
F109 15A	FOG 15A
F118 60A	ABS No.1 60A

Make: TOYOTA 4RUNNER

System: Engine management system

Configuration: STD

Model: 4RUNNER VZN180

Item: 5VZ-FE 183/4800

Production date: -08.2002

© Legion-Autodata

11.11.2014

page 1

F119 40A	ABS No.2 40A
F129 20A	SEAT HTR 20A
F142 15A	PWR OUT 15A
F143 10A	TURN 10A
F151 30A	PWR 30A
F165 20A	4WD 20A
F263 25A	TOWING 25A
F269 7,5A	DRL 7.5A
K3	Turn signal flasher
K4	Headlamps relay
K5	Front fog lamp relay
K7	Starter relay
K15	Rear window defogger relay
K31	ABS motor relay
K31-TRC	TRC pump motor relay
K32	ABS solenoid valve relay
K37	Engine control relay
K42	Clearance lamps relay
K55	Headlamp dimmer relay
K59	Power window relay
K96	Heater relay
K133	Accessory socket relay

