

K18	Fuel pump relay
K37	Engine control relay
M34	Fuel pump
S21-1	Knock sensor 1
S21-2	Knock sensor 2
S41	Throttle position sensor
S43	Crankshaft position sensor
S70	Coolant temperature sensor
S260	Mass air flow sensor assembly
S281	EVAP pressure sensor
Y18	EVAP purge valve
Y18-4	Fuel vapor pressure sensor solenoid valve
Y22-1	Injector 1
Y22-2	Injector 2
Y22-3	Injector 3
Y22-4	Injector 4
Y22-5	Injector 5
Y22-6	Injector 6
Y117	Canister close solenoid valve

